

Eventide

Argus 5000

Update can be completed through Internet, Floppy Disk, or PCMCIA Cards.

Environmental Conditions

DO-160B CAT.F1CAPASXXXXXXXXZBAAAAA



DEParture Mode

- Course-up map orientation.
- Aircraft is positioned in the center of the screen for 360 situation display.
- Maximum 40 NM map range.
- Plan Mode at the end of DEP

ENRoute Mode

- Course-up map orientation.
- Aircraft is positioned 20% above the lower window for more "forward looking view."
- Maximum 240 NM map range.

ARRival Mode

- North-up map orientation.
- Aircraft moves along the flight plan.
- Waypoint symbol is positioned in the center of the screen.
- Maximum 40 NM map range.

EMERgency Mode

- Displays nearest suitable landing facilities.
- Automatically displays important approach information.

SELect and INFO Modes

- Allows you to select and obtain information on any Airport or Navaid on the screen.
- Displays a "bow" adjacent to the selected facility showing bearing to, radial from, and distance to.
- Displays runway and approach information.